

Auto Candy Floss Machine Operating Procedure

1. Place Machine on a flat, stable surface.
2. Pull down handle to the front, this will unlock the candyfloss head and allow the bowl to sit on top
3. Plug in machine to proper electrical outlet.
4. With the **CANDY SWITCH** “off”, turn the **POWER SWITCH** “on”. The spinner head will not start to rotate.
5. With the spinner head stopped, pour sugar into the spinner head. Fill to about the 90% level. **DO NOT OVERFILL.** This is necessary to obtain a balanced condition in the floss head or excessive vibration will occur. Never add sugar while the motor is running. After adding floss sugar, manually spin head to balance.
6. Turn the **CANDY SWITCH** to “on”. The spinner head will rotate and heat, after about 45 seconds the machine will start to make cotton candy.
7. When the spinner head is empty, or to stop making cotton candy, turn the **CANDY SWITCH** “off”. The cooling cycle will start. When the cooling cycle completes, the spinner head will stop rotating. When the spinner head is stopped; re-fill with sugar, turn the **CANDY SWITCH** “on”, and continue to make cotton candy.

Following the above procedures will extend the life of the machine and prevent costly repairs.

POWER SWITCH – Supplies power to the machine without turning on any components. Also acts as a “Master” on/off switch. Turning the power switch off will turn the motor and heat off. (Power Switch is located on the side of the machine)

CANDY SWITCH – Turns the motor and head cycle on. Turning this switch “off” when making cotton candy allows the machine to start it’s cooling cycle. **Note:** Motor will continue turning during the cooling cycle, and will stop turning after 45-60 seconds. (Candy Switch is located on the front of the machine)

DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD

DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING

OPERATOR SHOULD WEAR EYE PROTECTION

DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD

USE FLOSS CONE TO COLLECT COTTON CANDY

List of Items Supplied for Standard Hire.

- ◆ **1 x Candy Floss Machine**
- ◆ **1 x Bowl**
- ◆ **1 x Netting with 6 x Clips to hold in place.**
- ◆ **1 x Mixing Bucket**

Please make sure these are returned to Video Tech. If not you may be charged for their replacement.

You will also receive Flossine to mix with 5kgs of Sugar and 3 x Sticks for making the Candy Floss. These do not need to be returned.

Warnings

- ◆ **Make sure machine is properly grounded.
Disconnect power before cleaning, servicing or removing any covers.
This unit is to be serviced by qualified personnel only.**
- ◆ **Moving parts can crush or cut. Keep clear of the spinner head. Allow spinner head to stop before loading with sugar.**
- ◆ **Risk of eye injury.
Wear eye protection. DO NOT operate without a shield or screen between cotton candy bowl and customer.**
- ◆ **Burn Hazard
Do not touch spinner head. Allow to cool before cleaning or servicing.**
- ◆ **Unit not to be operated by anyone under the age of 18**