

# Safety Instructions

- ◆ Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing. Do not use excessive water when cleaning.
- ◆ To avoid burns, do NOT touch the kettle while it is hot.
- ◆ ALWAYS wear safety glasses when servicing the equipment
- ◆ Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
- ◆ Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operating the equipment.
- ◆ This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.
- ◆ Disconnect Power cable before servicing, cleaning or repairing lamps
- ◆ Unplug Machine before cleaning, do NOT clean machine with Windex or any other ammonia based cleaner.

## Controls and their functions

- 1. Light and warmer switch**  
Turns on the heat to the bottom corn pan and heat light.
- 2. Kettle Motor Switch**  
Turns on the Motor which drives kettle agitator shaft
- 3. Kettle Heat Switch**  
Turns on the heat element.

## 6 Easy Steps to making great popcorn

1. Turn All Switches on
2. For first batch only let the kettle heat for 4 minutes
3. Add oil or oil bar, a cup of corn with Flavourcol already mixed in
4. Dump the popcorn from the kettle when the popping is 99% complete
5. Repeat steps 3 & 4 until desired amount is popped  
(It is always best to pop 5 batches every time you use machine)
6. On the final batch only – Turn kettle switch off as soon as corn starts popping rapidly to raise the kettle lid

**WARNING: Keep kettle switch off when not popping.**